

Alarms	Analog Parameters
Data Connection Lost	Battery Voltage
Generator Running	Engine Hours ¹
Generator Excessive Running ¹	
Fail to Exercise ¹	
Battery Voltage High ²	
Battery Voltage Low ²	
Common Alarm	
Coolant Temp High ³	
Coolant Temp Low ³	
Oil Pressure Low ³	
Coolant Temp High Shutdown ³	
Oil Pressure Low Shutdown ³	
Overcrank ³	
Overspeed ³	
Not in Auto ³	
Diagnostic Fault ³	
Controls	
Control Relay Output 1: Remote Start/Stop (if wired & activated by customer)	

All Alarms & Analog Parameters noted above are only available if so configured at Generator and ATS control panel.

It is recommended that a technician with communications experience be utilized to install and calibrate any optional OMN accessories.

¹Generator Excessive Running, Fail to Exercise, and Engine Hours are available when configured through OmniView. It is suggested to do this at time of monitoring setup.

²Battery Voltage High & Low Alarms based upon Battery Voltage Threshold settings set up in OmniView.

³Noted Alarms are Alarms available from the CAT GSC. See Caterpillar EMCPII & II+ Control Panel instructions for further information.