

| Alarms | Alarms | Analog Parameters | Analog Parameters |
|--------------------------------|-----------------------------|--|--|
| System Ready | Remote Start Relay Inactive | Oil Temp | HTS Backup Battery Volts ⁴ |
| Generator Running | Spare Relay Open | Coolant Temp | Supply Voltage |
| On Generator Power | Modbus Fault | Oil Pressure | Diesel Fuel Level ³ |
| On Line Power | Failed to Report Data | Coolant Level | ATS Load kW ² |
| Not In Auto | ATS Position ¹ | Fuel Level | ATS Load kWh ² |
| Charger Fail | | Battery Charge Current | ATS Load kVAR ² |
| Gen Batt Volts High Alarm | | Battery Volts | ATS Load kVA ² |
| Gen Batt Volts Low Alarm | | Generator Phase A Current | ATS Load Power Factor ² |
| Coolant Temp High Alarm | | Generator Phase B Current | ATS Load Average kW ² |
| Coolant Temp Low Alarm | | Generator Phase C Current | ATS Load Minimum kW ² |
| Coolant Temp High Shutdown | | Generator Current Average | ATS Load Maximum kW ² |
| Pre-Low Oil Pressure Alarm | | Generator Phase AB Volts | ATS Load Voltage Line – Line ² |
| Low Oil Pressure Shutdown | | Generator Phase BC Volts | ATS Load Voltage Line – Neutral ² |
| Emergency Stop Shutdown Active | | Generator Phase CA Volts | ATS Load Average Amps ² |
| Overcrank Shutdown | | Generator Average Volts | |
| Overspeed Shutdown | | Generator Power | |
| Gen Set Shutdown | | Generator Power Factor | |
| Low Fuel Level | | Generator Frequency | |
| Rupture Basin Alarm | | RPM | |
| Low Coolant Level Shutdown | | Engine Hours | |
| On Utility Power | | Alarm Count | |
| On Gen Power | | ATS Utility Average Volts ⁴ | |
| ATS Ready ⁴ | | ATS Utility Average Amps ⁴ | |

All Alarms & Analog Parameters noted above are only available if so configured at Generator and ATS control panel.

It is recommended that a technician with communications experience be utilized to install and calibrate any optional OMN accessories.

¹ATS Position Alarm requires an ATS with available position contacts if information not available through existing Controls. Customer to provide materials and labor to install wiring between OMN Monitor and ATS. Please note ATS Position monitoring request at time of order.

²ATS Load Analog Parameters require optional Power Meter Kit (Modbus) installed on load side of ATS if information not available through existing Controls. Customer to provide materials and labor to install wiring between OMN Monitor and Power Meter Kit. See OMN Power Meter Kit Spec Sheet for more details. Please note that Power Meter Kit can be installed in other locations other than load side of ATS.

³Fuel Level Analog Parameter requires optional Fuel Level Kit (Analog) if information not available through existing Controls. Customer to provide material and labor to install wiring between monitor and Fuel Level Kit. Please note depth of tank to ensure correct gauge is ordered. See OMN Fuel Level Kit Spec Sheet for more details.

⁴Alarm and Analog Parameters available when compatible Generac transfer switch is utilized.