

Alarms	Analog Parameters
Data Connection Lost	Battery Voltage <sup>2</sup>
Generator Running	Engine Hours <sup>1</sup>
Generator Excessive Running <sup>1</sup>	
Common Alarm	
Fuel Level Low	
Over Crank	
Over Speed	
Not In Auto	
Coolant Temp Low	
Oil Pressure Low	
Remote Start	
Controls	
Control Relay Output 1: Remote Start/Stop (if wired & activated by customer)	
Control Relay Output 2: Configurable (if wired & activated by customer)	

All Alarms & Analog Parameters noted above are only available if so configured at Generator.

It is recommended that a technician with communications experience be utilized to install and calibrate any optional OMN accessories.

<sup>1</sup> Generator Excessive Running and Engine Hours are available when configured through OmniView®. It is suggested to do this at time of monitoring setup.

<sup>2</sup> Battery Voltage High & Low Alarms based upon Battery Voltage Threshold settings set up in OmniView.