

Alarms	Analog Parameters
Data Connection Lost	Battery Voltage
Generator Running	Engine Hours ¹
Generator Excessive Running ¹	
Fail to Exercise ¹	
Battery Voltage High ²	
Battery Voltage Low ²	
Generator Supplying Load ³	
Coolant Temp Low ³	
Controls	
Control Relay Output 1: Remote Start/Stop (if wired and activated by customer)	

All Alarms & Analog Parameters noted above are only available if so configured at Generator and ATS control panel.

It is recommended that a technician with communications experience be utilized to install and calibrate any optional OMN accessories.

¹Generator Excessive Running, Fail to Exercise, and Engine Hours are available when configured through OmniView. It is suggested to do this at the time of monitoring setup.

²Battery Voltage High and Low alarms based upon Battery Voltage Threshold setting set up in OmniView.

³Noted Alarms require programming using DGC500 software and communication cable. Customer is responsible for having proper software and connection cables at time of install. The above DGC500 alarms are the standard alarms selected by OmniMetrix. Please note that other alarms can be configured using the DGC500 software. See DGC instructions for further information.