


TrueGuard 2 is for use on 12v systems only

1. Unpack the monitor and antenna. The integrated data cable will be attached to your monitor. This cable includes wires to power the monitor as well as wires for alarm inputs, relay outputs and analog inputs. Inspect all components to verify there is no shipping damage.
2. Place the antenna on the roof of the generator and route the antenna cable into the area of the generator control. If the mounting surface will not hold a magnetic antenna, install the steel mounting plate on the surface and install with the mounting hardware. The antenna used for transmitting must be installed to provide a separation distance of at least 20 cm from all persons and must not transmit simultaneously with any other antenna transmitters. BE SURE to provide a drip loop lower than the monitor to keep water from running down the antenna cable into the monitor connection.
3. Attach the monitor via its magnetic feet on top of the engine controller or other appropriate location. Horizontal surfaces are best, but the unit may be mounted vertically or even upside down if necessary. *Note: If mounted vertically, install the monitor with the cables down to prevent water from entering the enclosure.*
4. Instructions for wiring the monitor can be found in the table on the following page.
5. Attach the antenna cable to the front of the monitor, and tighten thumb tight.
6. Once the setup is complete, allow 15 minutes for the monitor to log into the network and then call OmniMetrix at 770-209-0012 to confirm installation. Access to machine data is through the OmniView® web interface at www.omnimetrix.net. Contact OmniMetrix for login instructions and web training.



TrueGuard 2

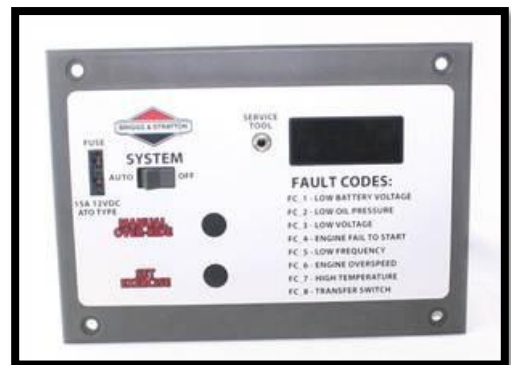

Briggs & Stratton Residential
Control Panel





Alternate Briggs & Stratton Residential
Control Panel

Briggs & Stratton Residential Wiring Table		
OMN Wire	Function	Termination
Red	Power-In (9-30 Vdc)	Battery +
Black	Ground	Battery -
Orange	Generator Running	+ side of Fuel solenoid
Blue	Common Alarm	Terminal 1 - Normally Open Fault Contact
Jumper to B- /DC GND	Common Ground	Terminal 2 - Common Fault Contact
Gray	Alarm Data	Terminal 6 - LED

Briggs & Stratton Wiring Instructions

Orange Wire Termination on Fuel Solenoid

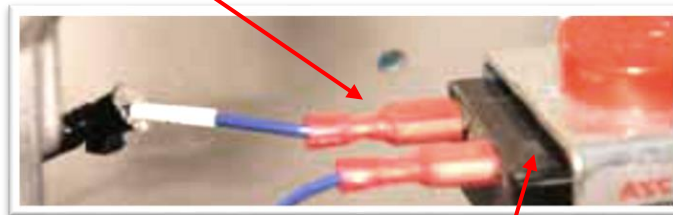

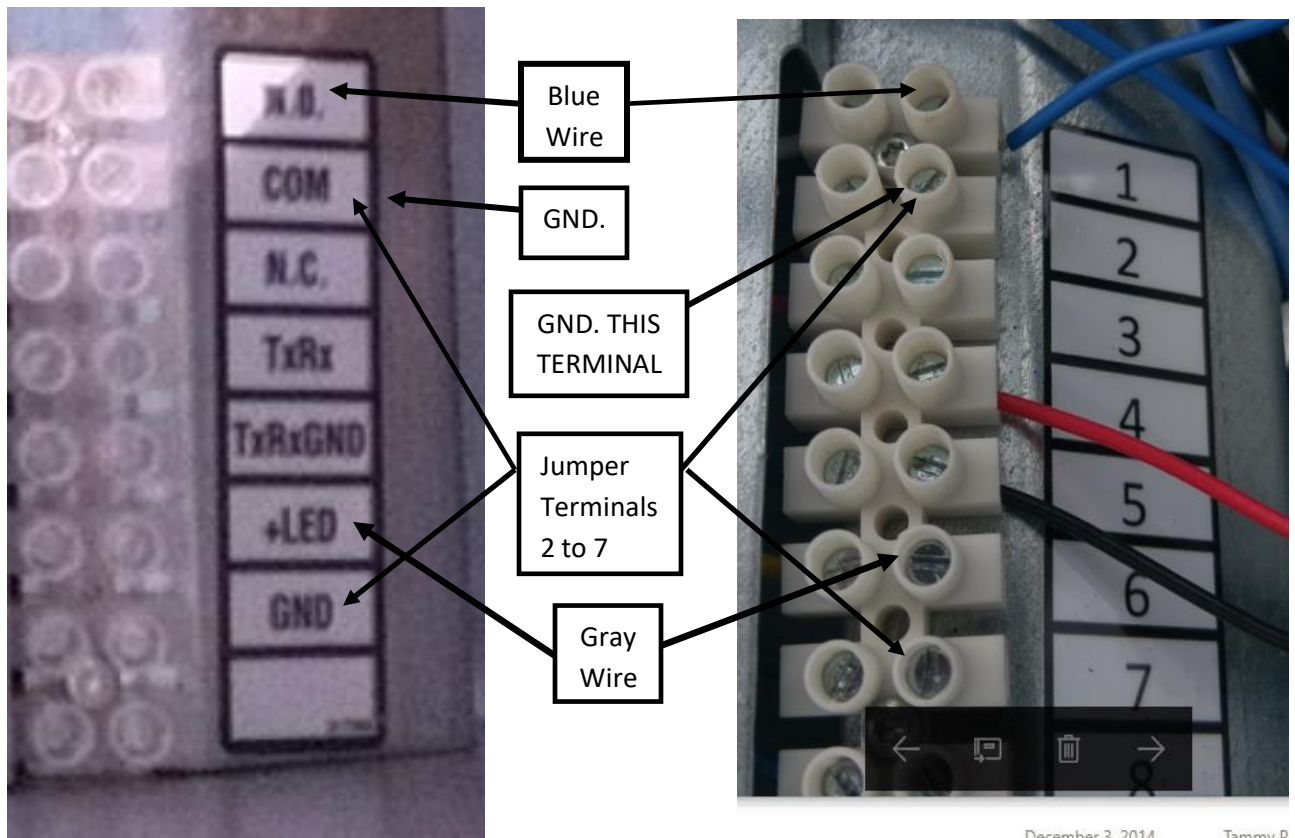

December 3, 2014 Tammy P

OR

Optional Wiring Instructions R Panel

LED Behavior:

The BLUE LED will illuminate at boot up (stay on). The LED will start blink rapidly, on/off every 1/2 second, once the modem is connected to an available tower. The LED will begin to blink more slowly, three seconds on, three seconds off, once the modem has connected to the OmniMetrix server. Note: The BLUE LED is an indication of network service. If it continues to stay illuminated (on), please check the SIM card, antenna, and signal strength.

The Red LED illuminates approximately 20 seconds after the Blue LED illuminates. A solid Red LED indicates the unit is trying to log into our server.

After approximately 20 seconds, Red LED turns off and the Green LED illuminates for 3 seconds. This indicates the unit has logged into our server.

The Red LED or Green LED flashes after login: Short Green LED flashes indicate the monitor is getting data; Long flashes of the Red LED indicate failure.

Signal Strength: LED signal strength indication is provided at login and routinely during operation, using the Red & Green LED's as follows:

1. The Red & Green LED's flash rapidly for 2 seconds to indicate the beginning of the "Signal Strength" routine.
2. Next, the LED(s) will stay fully illuminated 2 seconds to indicate the current signal strength:
 - a. Solid Red LED only = below 10
 - b. Solid Red & Green LED's = 10~60
 - c. Solid Green LED only = greater than 60.
3. To complete the Signal Strength cycle, the Red & Green LED's flash rapidly again for 2 seconds, then stop (end of cycle).

If you have any questions, please call OmniMetrix Tech Support at 770-209-0012 or email at techsupport@omnimetrix.net.